

---

---

**Cranes — Control layout and  
characteristics —**

Part 2:

**Basic arrangement and requirements for  
mobile cranes**

*Appareils de levage à charge suspendue — Disposition et  
caractéristiques des commandes —*

*Partie 2: Disposition et exigences de base pour les grues mobiles*

STANDARDSISO.COM : Click to view the full PDF of ISO 7752-2:2011



STANDARDSISO.COM : Click to view the full PDF of ISO 7752-2:2011



**COPYRIGHT PROTECTED DOCUMENT**

© ISO 2011

All rights reserved. Unless otherwise specified, no part of this publication may be reproduced or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without permission in writing from either ISO at the address below or ISO's member body in the country of the requester.

ISO copyright office  
Case postale 56 • CH-1211 Geneva 20  
Tel. + 41 22 749 01 11  
Fax + 41 22 749 09 47  
E-mail [copyright@iso.org](mailto:copyright@iso.org)  
Web [www.iso.org](http://www.iso.org)

Published in Switzerland

## Foreword

ISO (the International Organization for Standardization) is a worldwide federation of national standards bodies (ISO member bodies). The work of preparing International Standards is normally carried out through ISO technical committees. Each member body interested in a subject for which a technical committee has been established has the right to be represented on that committee. International organizations, governmental and non-governmental, in liaison with ISO, also take part in the work. ISO collaborates closely with the International Electrotechnical Commission (IEC) on all matters of electrotechnical standardization.

International Standards are drafted in accordance with the rules given in the ISO/IEC Directives, Part 2.

The main task of technical committees is to prepare International Standards. Draft International Standards adopted by the technical committees are circulated to the member bodies for voting. Publication as an International Standard requires approval by at least 75 % of the member bodies casting a vote.

Attention is drawn to the possibility that some of the elements of this document may be the subject of patent rights. ISO shall not be held responsible for identifying any or all such patent rights.

ISO 7752-2 was prepared by Technical Committee ISO/TC 96, *Cranes*, Subcommittee SC 6, *Mobile cranes*.

This second edition cancels and replaces the first edition (ISO 7752-2:1985), which has been technically revised. It also incorporates the Addendum ISO 7752-2:1985/Add 1:1986.

ISO 7752 consists of the following parts, under the general title *Cranes — Control layout and characteristics*:

- *Part 1: General principles*
- *Part 2: Basic arrangement and requirements for mobile cranes*
- *Part 3: Tower cranes*
- *Part 4: Jib cranes*
- *Part 5: Overhead travelling cranes and portal bridge cranes*

## Introduction

Mobile crane operators frequently transfer from one crane to another of different model or manufacturer. This part of ISO 7752 establishes a consistent arrangement and movement for the basic controls used during the crane-operating cycle, to reduce operator confusion or incorrect control in an emergency.

STANDARDSISO.COM : Click to view the full PDF of ISO 7752-2:2011

# Cranes — Control layout and characteristics —

## Part 2: Basic arrangement and requirements for mobile cranes

### 1 Scope

This part of ISO 7752 establishes the arrangement, requirements and direction of movement of the basic controls for slewing, load hoisting and lowering, and boom luffing and telescoping, on mobile cranes as defined in ISO 4306-2. It deals with bi-directional controls and the basic arrangement and requirements for cross-shift levers (multi-directional controls). It is intended to be used in conjunction with ISO 7752-1.

### 2 Normative references

The following referenced documents are indispensable for the application of this document. For dated references, only the edition cited applies. For undated references, the latest edition of the referenced document (including any amendments) applies.

ISO 4306-2, *Cranes — Vocabulary — Part 2: Mobile cranes*

ISO 7752-1, *Cranes — Control layout and characteristics — Part 1: General principles*

### 3 Terms and definitions

For the purposes of this document, the terms and definitions given in ISO 4306-2 and the following apply.

#### 3.1

##### **operator**

person operating the crane for the purposes of positioning loads

[ISO 7752-1]

#### 3.2

##### **control**

actuating device which forms an interface between the crane operator and crane control system

[ISO 7752-1]

#### 3.3

##### **control station**

permanent position of controls on or off the crane

[ISO 7752-1]

### 4 Bi-directional levers, crane with fixed-length boom

The basic controls shall be arranged as shown in Figure 1.

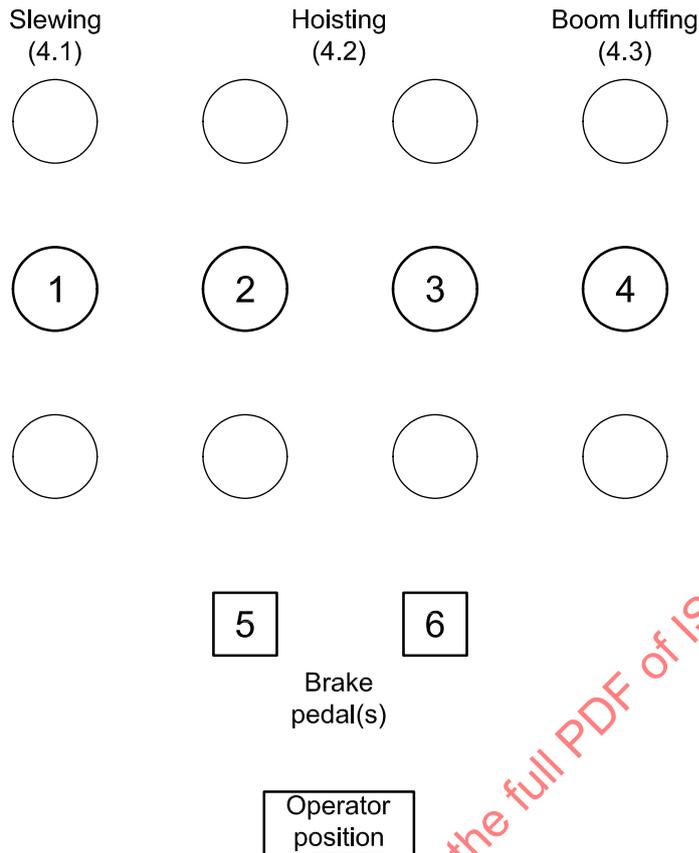


Figure 1 — Crane control diagram for cranes fitted with fixed-length boom

#### 4.1 Slewing control — Hand lever 1

Push the lever forward to slew towards the boom:

- slew left (operator's position on right side);
- slew right (operator's position on left side or centre of crane).

Centre the lever to release the slewing power.

Pull back the lever to reverse direction.

#### 4.2 Hoisting control — Hand lever 2 and foot pedal 5, hand lever 3 and foot pedal 6

Pull the lever back to hoist the load.

Centre the lever to release the power and to hold the load (if equipped with an automatic brake) or to control the load by depressing the brake pedal.

Push the lever forward to lower the load.

#### 4.3 Boom luffing control — Hand lever 4

Pull the lever back to raise the boom.

Centre the lever to hold the boom in position.

Push the lever forward to lower the boom.

#### 4.4 Boom luffing control — Alternative arrangement (foot pedal operation)

The basic controls shall be arranged as shown in Figure 2.



Figure 2 — Crane control diagram for cranes fitted with fixed-length boom and alternative arrangement for boom luffing control (foot pedals)

##### 4.4.1 Slewing control — Hand lever 1

Push the lever forward to slew towards the boom:

- slew left (operator's position on right side);
- slew right (operator's position on left side or centre of crane).

Centre the lever to release the slewing power.

Pull back the lever to reverse direction.

##### 4.4.2 Hoisting control — Hand lever 2, hand lever 3

Pull the lever back to hoist the load.

Centre the lever to release the power and to hold the load.

Push the lever forward to lower the load.

##### 4.4.3 Boom luffing control — Foot pedals 4 and 5

Depress foot pedal 4 to raise the boom.

Depress foot pedal 5 to lower the boom.

Release foot pedals 4 and 5 to hold the boom stationary.

## 5 Bi-directional levers, crane with telescoping boom

The basic controls shall be arranged as shown in Figure 3.

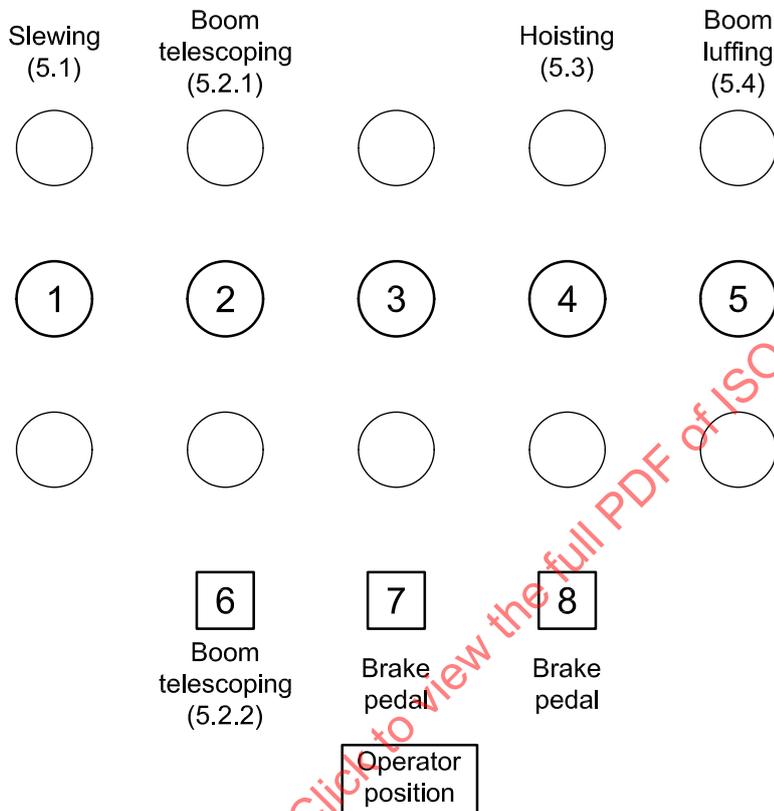


Figure 3 — Crane control diagram for cranes fitted with telescoping boom

### 5.1 Slewing control — Hand lever 1

Push the lever forward to slew towards the boom:

- slew left (operator's position on right side);
- slew right (operator's position on left side or centre of crane).

Centre the lever to release the slewing power.

Pull back the lever to reverse direction.

### 5.2 Boom telescoping control

#### 5.2.1 Hand lever 2

Push the lever forward to extend the boom.

Centre the lever to hold the boom extension position.

Pull the lever back to retract the boom.

**5.2.2 Foot pedal 6 — Optional (in place of hand lever 2)**

Rock the pedal forward (toe down) to extend the boom.

Centre the pedal to hold the boom extension position.

Rock the pedal rearward (heel down) to retract the boom.

**5.3 Hoisting control — Hand lever 3 and foot pedal 7, hand lever 4 and foot pedal 8**

Pull the lever back to hoist the load.

Centre the lever to release the power and to hold the load (if equipped with an automatic brake), or control the load by depressing the brake pedal.

Push the lever forward to lower the load (if equipped with an automatic brake) or activate “powered load lowering”.

**5.4 Boom luffing control — Hand lever 5**

Pull the lever back to raise the boom.

Centre the lever to hold the boom in position.

Push the lever forward to lower the boom.


Additional levers may be located between levers 1 and 2 for independently telescoping boom sections.

**6 Cross-shift levers (multi-directional controls), crane with fixed-length boom**

**6.1 Basic control arrangement**

The basic controls shall be arranged as shown in Figure 4.

As an alternative, foot pedals may be provided for luffing (see 6.2.3).

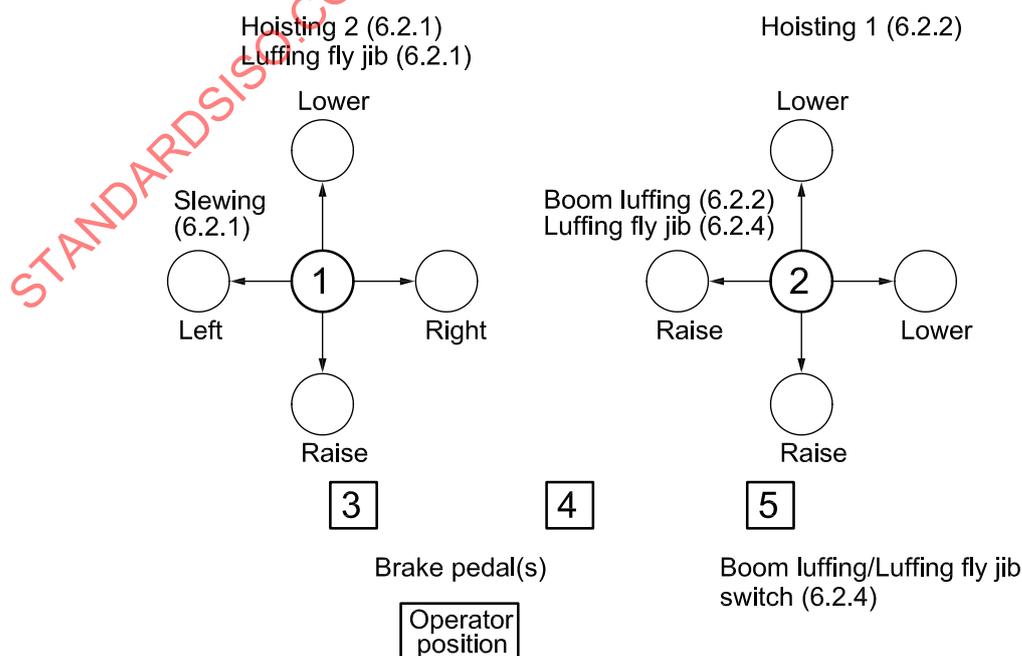

**Figure 4 — Crane control diagram for cranes fitted with fixed-length boom**

## 6.2 Direction of movement

### 6.2.1 Hoisting 2 and slewing control — Hand lever 1 and foot pedal 3

#### 6.2.1.1 Vertical lever

Pull the lever back to raise the load (or fly jib).

Centre the lever to hold the load (or fly jib) in position (if equipped with an automatic brake), or control the load by depressing the brake pedal.

Push the lever forward to lower the load (or fly jib).

#### 6.2.1.2 Horizontal lever

Move the lever to the left to slew left.

Centre the lever to release the slewing power.

Move the lever to the right to slew right.

### 6.2.2 Hoisting 1 and luffing control — Hand lever 2 and foot pedal 4

#### 6.2.2.1 Vertical lever

Pull the lever back to raise the load.

Centre the lever to hold the load in position (if equipped with an automatic brake), or control the load by depressing the brake pedal.

Push the lever forward to lower the load.

#### 6.2.2.2 Horizontal lever

Move the lever to the left to raise the boom.

Centre the lever to hold the boom in position.

Move the lever to the right to lower the boom.

### 6.2.3 Foot pedals 3 and 4

Foot pedals 3 and 4 may be used for luffing of the boom if hoist drums are equipped with automatic brakes (see 4.4.3).

### 6.2.4 Luffing/luffing fly jib selection switch 5 in conjunction with hand lever 2

#### 6.2.4.1 Selection switch 5 in position “Luffing” (see 6.2.2.2)

#### 6.2.4.2 Selection switch 5 in position “Luffing fly jib”

Move the lever to the left to raise the luffing fly jib.

Centre the lever to hold the luffing fly jib in position.

Move the lever to the right to lower the luffing fly jib.

## 7 Cross-shift levers (multi-directional controls) — Cranes with telescoping boom

### 7.1 Basic control arrangement

The basic controls shall be arranged as shown in Figure 5.

As an alternative, a foot pedal may be provided for telescoping (see 7.2.3.2).

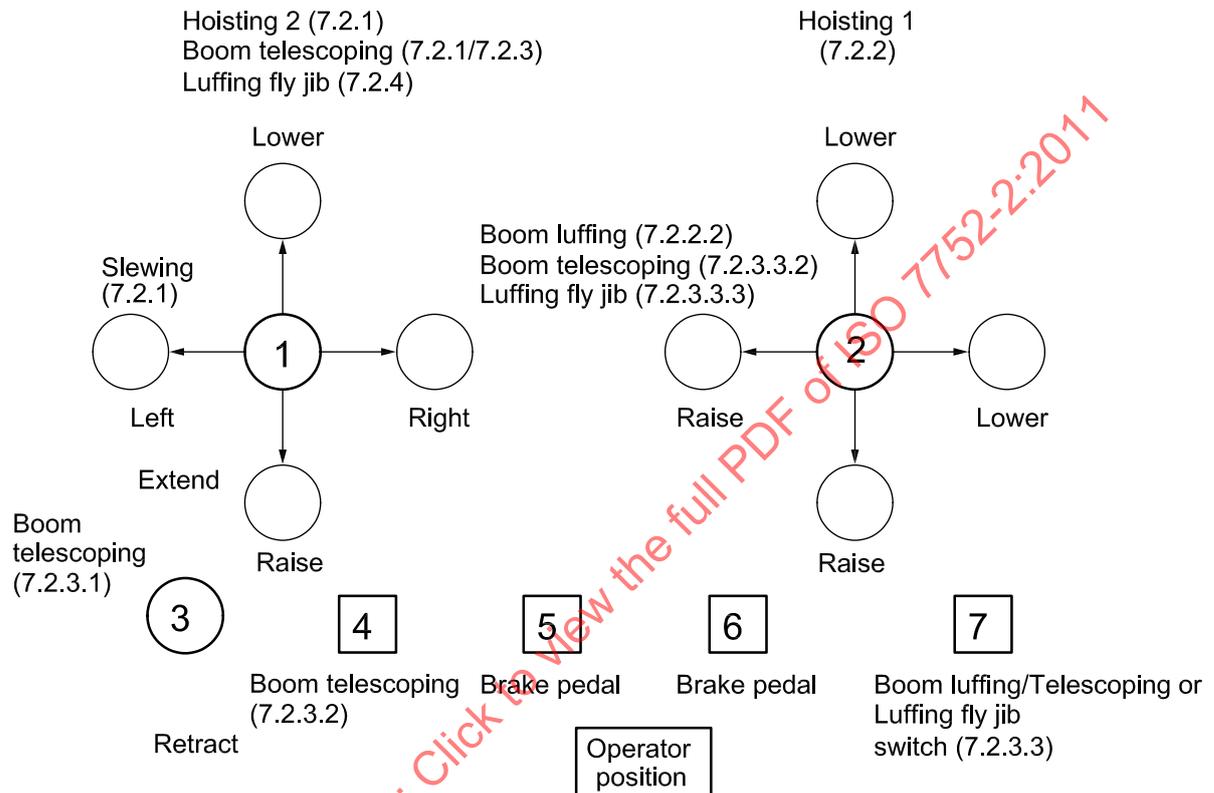


Figure 5 — Crane control diagram for cranes fitted with telescoping boom

### 7.2 Direction of movement

#### 7.2.1 Hoisting 2 and slewing control — Hand lever 1 and foot pedal 5

##### 7.2.1.1 Vertical lever

Pull the lever back to raise the load (or retract the boom).

Centre the lever to hold the load (or keep the boom) in position (if equipped with an automatic brake), or control load by depressing the brake pedal.

Push the lever forward to lower the load (or extend the boom).

##### 7.2.1.2 Horizontal lever

Move the lever to the left to slew left.

Centre the lever to release the slewing power.

Move the lever to the right to slew right.